




fashionable since
the 15th century

Vehicle Areas - Cobblestone Fans

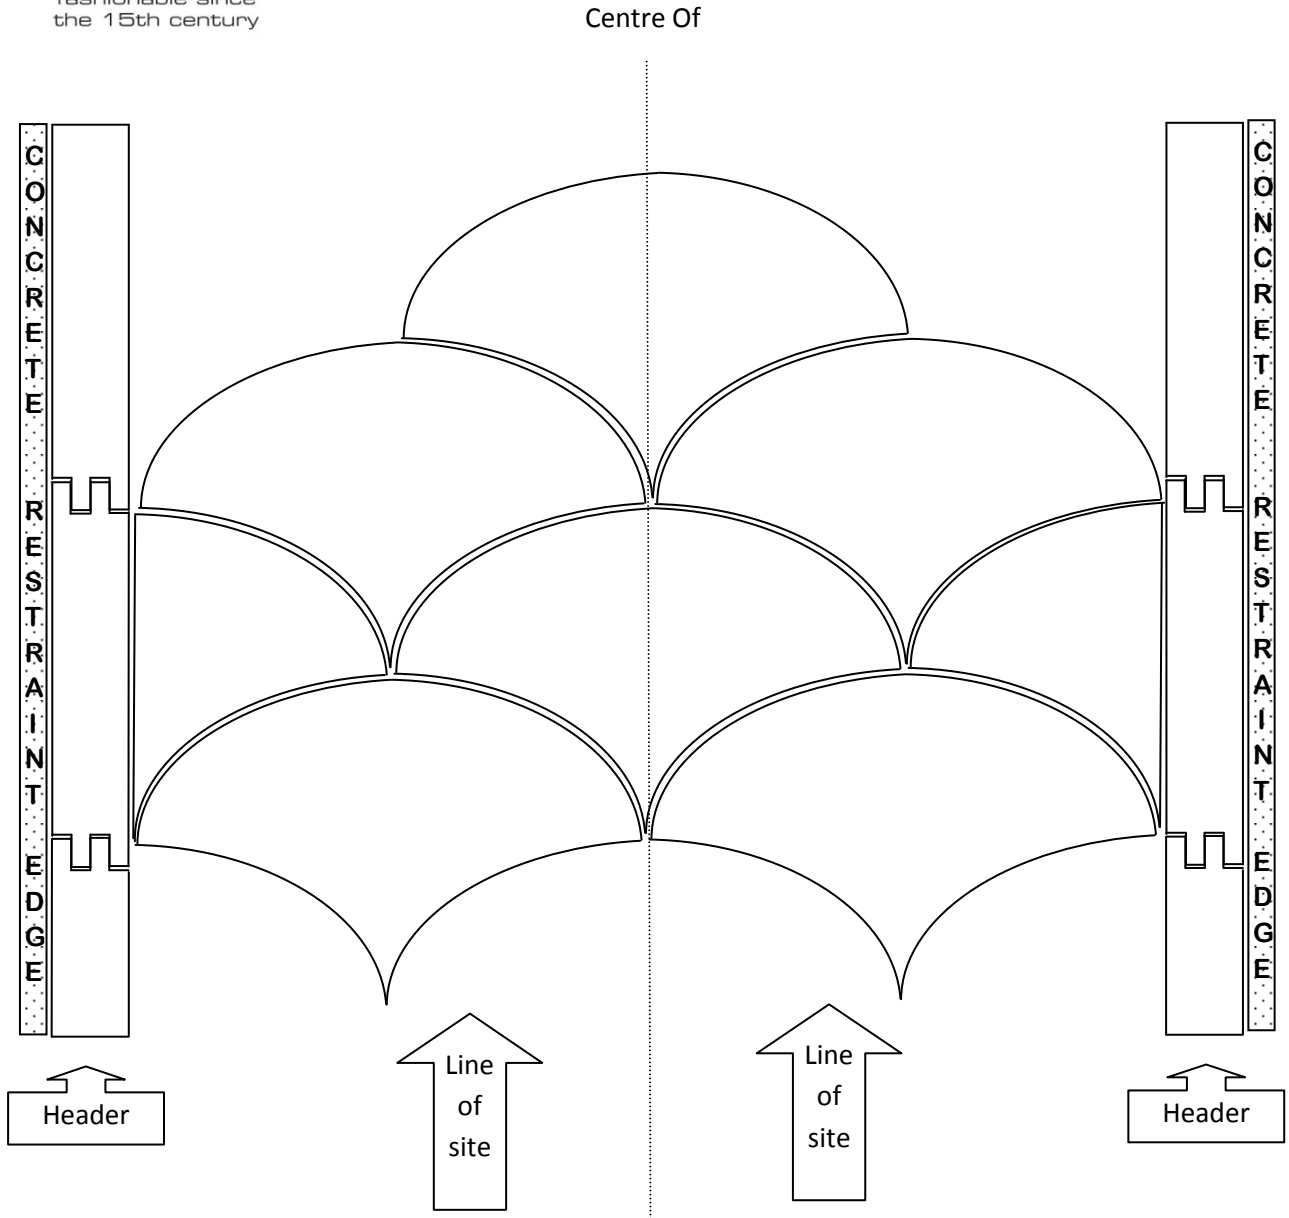

NOTES:

1. Find the centre line for the area to be paved and lay a column of fans centered on the line and then lay the fans out towards the edge of your paving area. This is important to create the best visual effect with the fans. Don't lay the fans commencing from the edge.

2. The use of a header / border row is strongly recommended in vehicle areas to add additional strength and support to the paved area but also is an attractive design feature. The header can be 2 to 4 cobble wide. Each cobble sheet is 400mm wide, consisting of 4 rows of cobblestones (i.e. 100mm per row), so if you require a 2 cobble header simply cut the sheet in half (length ways). For a 4 cobble header you would use the entire cobble sheet.
3. You can minimise cobble wastage by choosing a header width which enables you to fit an exact or close to exact number of sheets. The fan sheets are 1270mm wide and 750mm tall and unlike the Cobble Straights don't require interlocking.
4. For vehicle areas the outer edge of paved areas should contain a concrete restraint edge for extra strength and support. For instructions on how to install the restraint edge download our "Installing A Concrete Edge Restraint" document.